



ELECTRONICS

World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No. : Test Version
Venezuela. 9/99. Rev.1.0

SAMSUNG

**PORTABLE CELLULAR
TELEPHONE
SCH-620
User's Manual**



Table of Contents

GETTING STARTED

Unpacking	7
Phone Layout	8
Display	10
Installing Battery	11
Charging a Battery	13
Switching the Phone On/Off	15

GENERAL FUNCTIONS

Making a Call	16
Correcting the Number	16
Ending a Call	16
Emergency Dialing	17
Prepend Dialing	17
Making a Call from the Phone Book	18
Voice Dialing	19
Last Number Redial	20
Answering a Call	21
Viewing Missed Calls	22
In-Call Options	23
Call Waiting	23
Three-Way Calling	23
Call Forwarding	24
Adjusting the Volume	24
Quick Switching to Manner Mode	25
Recording Voice Memo	25

USING THE MENUS

Using the Scroll Keys	26
Using the Index System	27
Menu Map	28

CALLS

Outgoing (<i>MENU 1-1</i>)	30
Incoming (<i>MENU 1-2</i>)	31
Erase Logs (<i>MENU 1-3</i>)	32
Air Time (<i>MENU 1-4</i>)	32

PHONE BOOK

Find Name (<i>MENU 2-1</i>)	33
My Phone Number (<i>MENU 2-2</i>)	34
Add Entry (<i>MENU 2-3</i>)	34
Storing Phone Numbers at Call End	34
Entering a Name	35
Find Entry (<i>MENU 2-4</i>)	35

SOUNDS

Ring (<i>MENU 3-1</i>)	36
Ring Volume	36
Ring Type	36
Ring Tone	37
Key Beep (<i>MENU 3-2</i>)	37
Alert (<i>MENU 3-3</i>)	37
Minute Beep	37
Service Area	37
Alarm (<i>MENU 3-4</i>)	37
Differential Ring (<i>MENU 3-5</i>)	38
Power On/Off (<i>MENU 3-6</i>)	38

DISPLAY

Backlight (<i>MENU 4-1</i>)	39
Greeting (<i>MENU 4-2</i>)	39
Version (<i>MENU 4-3</i>)	39
Language (<i>MENU 4-4</i>)	39
Calculator (<i>MENU 4-5</i>)	40
World Time (<i>MENU 4-6</i>)	40

VOICE DIAL

Record (<i>MENU 5-1</i>)	41
Review/Erase (<i>MENU 5-2</i>)	42
Erase All (<i>MENU 5-3</i>)	43
Set Active (<i>MENU 5-4</i>)	43

VOICE MEMO

Review (<i>MENU 6-1</i>)	44
Record (<i>MENU 6-2</i>)	45
Erase All (<i>MENU 6-3</i>)	45

SETUP

Auto Retry (<i>MENU 7-1</i>)	46
Auto Receive (<i>MENU 7-2</i>)	46
Auto Hyphen (<i>MENU 7-3</i>)	46
Answering (<i>MENU 7-4</i>)	46
Tone Length (<i>MENU 7-5</i>)	47
Tone (<i>MENU 7-6</i>)	47
Set Time (<i>MENU 7-7</i>)	47
Analog Call (<i>MENU 7-8</i>)	48

SECURITY

Lock (MENU 0-1)	49
Restrict (MENU 0-2)	50
Lock Code (MENU 0-3)	50
Emergency Number (MENU 0-4)	50
Send PIN (MENU 0-5)	51
Clear Memory (MENU 0-6)	51
NAM Mode (MENU 0-7)	52
Block Own Number (MENU 0-8)	52
System Selection (MENU 0-9)	53
Reset Phone (MENU 0-0)	53

MESSAGES

Reading Message (☒ 1)	54
Transmitting Message (☒ 2)	56

ACCESSORIES	57
-------------------	----

USING THE BATTERIES	58
---------------------------	----

SAFETY INFORMATION	60
--------------------------	----

GLOSSARY OF TERMS	64
-------------------------	----

QUICK REFERENCE CARD	67
----------------------------	----

Safety Precautions and Important Notices

Read these simple guidelines. Failure to comply with these guidelines may be dangerous or illegal.

For more detailed safety information, see Safety Information on page 60.

ROAD SAFETY COMES FIRST

Do not use a hand-held phone while driving; park the vehicle first.

SWITCH OFF IN AIRCRAFT

Mobile phones can cause interference. Using them on aircraft is illegal.

SWITCH OFF NEAR BLASTING

Do not use the phone where a blasting operation is in progress. Observe restrictions, and follow any regulations or rules in force.

SWITCH OFF WHEN REFUELLING

Do not use the phone at a refuelling point or near fuels or chemicals.

INTERFERENCE

All mobile phone may be subject to radio interference, which may affect their performance.

QUALIFIED SERVICE

Only qualified service personnel must install or repair cellular equipment. Use only approved accessories and batteries.

USE SENSIBLY

Use only in the normal position (to ear).
Avoid unnecessary contact with the antenna when the phone is switched on.

IMPORTANT! Use only accessories approved by the phone manufacturer. This apparatus is intended for use when supplied with power from SAMSUNG approved Travel adapter and Desktop charger. The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

 
Unpacking

Your package contains the following items.


Handset



Desktop Charger

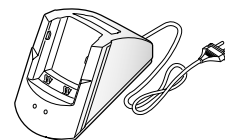

Battery

 

Hand Strap



 
User's Manual









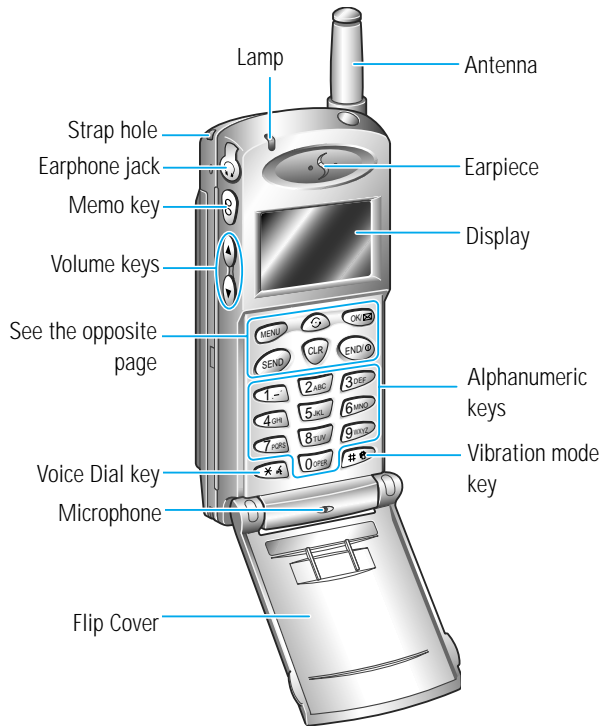


In addition, you can obtain the accessories for your phone from your local SAMSUNG dealer. For information on the accessories, see page 57.

Phone Layout




The following illustrations shows the main elements of your phone.

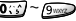

Key Functions

 
-  Enters the menu facility. Also, scrolls through the menu options.
-  *In the menu facility*, scrolls through the menu options. *In the idle mode*, displays Phone Book names.
-  *In the idle mode*, enters message menu. *In the menu facility*, selects a menu function or stores information that you have entered (such as a name in the phone memory).
-  Makes or answers call. *In the idle mode*, enters Outgoing call log.
-  Deletes characters from the display. *In the menu facility*, returns to the previous menu level.
-  Ends a call. Also switches the phone on and off when pressed and held. *In the menu facility*, returns to the idle mode and cancels your input.
-  Enters numbers, letters and some special characters.
-  *In the idle mode*, enters Voice Dial mode when pressed and held. *In name input mode*, moves cursor to left.
-  *In the idle mode*, quickly changes to Vibration mode when pressed and held. *In name input mode*, moves cursor to right.

(On the side of the phone)


-  Enters Voice Memo menu. Holding down the key starts recording voice memo.
-  Adjusts voice volume during conversation and key beep volume in the idle mode. *In the menu facility*, scrolls through the menu options.
- 


Display


The display comprises two areas: an upper line of static icons, and the lower text and graphic area. The following icons display at power-on:

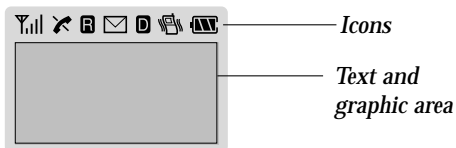

Icons

 Shows the received signal strength. The greater the number of bars, the better the signal strength.


 Indicates that the phone is outside a service area and cannot send or receive calls.

 Appears when you are out of your home area and have registered with a different network (when travelling in other countries, for example).

 Appears when a new message has been received.

 Indicates a Digital mode.

 
 Indicates a Vibrate mode.

 Shows the level of your battery. The more bars you see, the more power you have left.

 
Installing Battery

To Install the Battery

1. Hold the battery so that the metal contacts on the bottom of the battery line up with the metal contacts on the back of the phone.
2. Place the battery on the back of the phone with the top of the battery about a quarter of an inch from the latch.

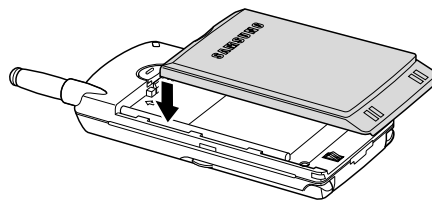


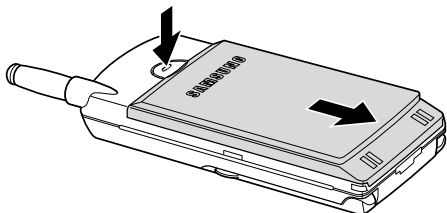 
3. Gently slide the battery toward the top of the phone until snaps into place.

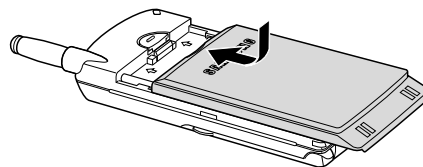

To Remove the Battery

If you want to remove the battery, do as follows:

1. If necessary, switch off the phone by holding down the  key until power-off message is displayed.
2. Push and hold down the catch above the battery on the back of the phone, and slide the battery down the phone. Then lift the battery away.



 
Charging a Battery


Your phone is powered by a rechargeable Li-ion battery. A desk top charger is provided with your phone. Use only approved batteries and chargers. Ask your local SAMSUNG dealer for further details.


The phone can be used while the battery is charging.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 180 minutes.


1. Plug the power cord of the charger into a standard wall outlet.

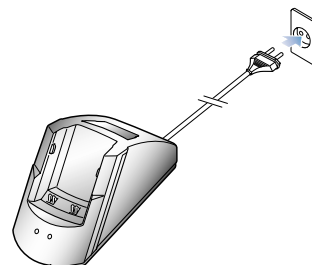


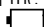 2. Remove the battery from the phone and place it in the rear compartment of the charger. The red lamp marked  on the front of the charger lights up.

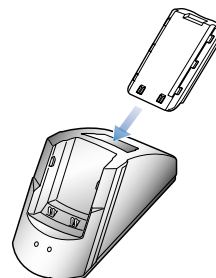


Switching the Phone On/Off

 3. If you do not wish to use your phone while charging the battery, you can leave the battery attached to the phone. Place the phone with the battery attached in the front compartment of charger with the keypad facing forward. The red lamp marked  on the front of the charger lights up.

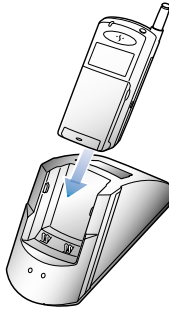


Low Battery Indicator

 
When the battery is weak and only a few minutes of talk time remain, a clear battery icon (no bars displayed) flashes in the upper right corner of the screen. You will hear a warning tone.

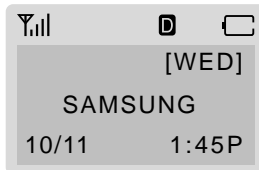


When the battery becomes too weak for the phone to operate, it switches off automatically.

1. Open the flip cover.
2. Hold down  key for more than one second to switch the phone on.

The red light flashes, an alert sounds:

- When the system locates services, the greeting message displays along with the date and time. You can now place and receive calls.
- If the system cannot locate service, the greeting message displays without the date and time. In this case, you cannot place and receive calls. Power off the phone, then try again later when service is available.
- If your phone is locked, '-Locked-' displays. Press  key, and enter the four-digit lock code to unlock the phone.

3. When you wish to switch the phone off, hold down the  key for more than two seconds.

Making a Call

When the idle screen is displayed, key in the area code and phone number and press  key.

Note: If you have set **Auto Retry** option (7-1) to **On** (see page 46), and the call does not connect, the phone automatically retries to make the call.

Correcting the Number


To clear...

Then


The last digit displayed

Press the  key.

The whole display

Hold down the  key for more than one second.

Ending a Call

When you have finished your call, briefly press the  key or close the flip.




Emergency Dialing

You can place calls to 190 or one of the three emergency numbers that are in your emergency number list even if your phone is locked. For further information on emergency number list, refer to page 50.

Prepend Dialing

The Prepend option enables you to add up to three digits, such as area codes and network feature activation codes, to a phone number of up to 10 digits. You can prepend an existing entry in the Phone Book or Call Logs before dialing.

To prepend existing phone numbers in the Phone Book or Call Logs:

1. Access the phone number entry.
2. When the desired phone number displays, press  key to access Options.
3. Press  key to select **Prepend** option.
4. Enter the area code or feature code.
5. Press  key to dial the number.

Making a Call from the Phone Book


You can store the phone numbers called regularly in memory, called the Phone Book. You then simply recall the number to dial.

For further information on Phone Book, refer to page 33.

FINDING ENTRIES BY NAME, THEN DIAL

1. Press  key in the idle mode.

The screen shows the names stored in the Phone Book in the alphabetical order.

2. Use  key to find the desired name. You can also enter the first letter of the name by pressing the associated alphanumeric key.

3. Press  key to dial the stored number with the name.

ONE-TOUCH DIALING BY MEMORY LOCATION

Memory locations 01 through 09 are special one-touch locations. You can dial the phone numbers stored in the Phone Book memory from 01 through 09 simply by pressing one button.

1. Press and hold the second digit of the memory location containing the number to be dialed.

For example: Location no. 09

Press  and hold.



The number (and name) stored is displayed, then dialed.

TWO-TOUCH DIALING BY MEMORY LOCATION

Once you have stored phone numbers in the phone book memory, you can dial them easily whenever you want.


1. Press the first digit briefly, then hold down the second digit of the memory cell.

For example: Location no. 23

Press  briefly and hold down .

The number (and name) stored is displayed, then dialed.

Voice Dialing







1. To place the call, press and hold  key, or open the flip, depending on the **Set Active (5-4)** option (see page 43).

2. At the voice prompt, say the name into the phone.

- If the phone recognizes the name, the phone attempts a connection.
- If the phone does not recognize the name, the screen prompts for the name again.
- If the phone is unable to recognize the name after two attempts, the message **Cannot Recognize Name.** **Please check name** displays. Try the call again later, or check the recorded name.

 
Last Number Redial

The phone stores the last 10 numbers dialled. To recall any of these numbers, proceed as follows.


1. If there are any characters on the display, clear the display by holding down the  key for more than one second.
2. Press  key. The list of outgoing calls are displayed.
3. Use the  key (or  or  key on the left side of the phone) to scroll through the numbers until you select the required number.
4. Press  key to dial the number displayed.


Answering a Call

When somebody calls you, the phone rings and **CALL** in the middle of the screen is displayed.

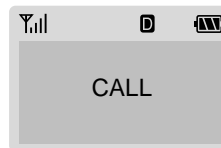

If the caller can be identified, the caller's phone number (or name if stored in your Phone Book) is displayed. If the caller cannot be identified, only the **CALL** message appears.

1. To answer a call, open the flip cover. If the flip is already open, press any key except for  key.

 
If the menu option is set to **AnyKey Ans.**, you can answer a call only by pressing any key except for  key.

2. End the call by closing the flip cover or pressing  key.

Note: You can answer a call while using the phone book or menu features. Your setting will be cancelled.

Viewing Missed Calls

If you are unable to answer a call for any reason, you can find out who was calling you, if this service is available. In this way, you can call the person back, if necessary.

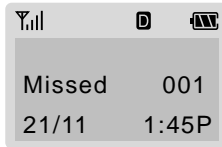

The number of missed calls is displayed on the idle screen immediately after the call was missed.



To view the missed call, refer to **'Incoming' (1-2)** under **'Calls'** on page 31.

In-Call Options

Call Waiting

This feature enables you to receive a second call during conversation. When a waiting call comes, the incoming call alert sounds, when set, and a text notification displays. Contact your service provider to activate Call Waiting.




To answer a waiting call:

1. To answer the call, Press  key. The phone connects the calling party, and places the current party on hold.
2. Press  key again to switch between two parties.

Three-Way Calling

This feature enables you to conduct conference calls with two separate parties at the same time. You are billed airtime for each outgoing call separately. Contact your service provider to activate Three-Way Calling.



To place a Three-Way call:

1. During conversation, press  key, enter the phone number for the third party, and then press  key again. The phone places the other party on hold.
2. When the third party answers, press  key again, to connect with the original party.

Call Forwarding

This feature provides the option of forwarding incoming calls to another phone number, even while your phone is off. Activating Call Forwarding does not affect outgoing calls made from this phone. Contact your service provider to activate Call Forwarding.

Adjusting the Volume



During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone. Press  key to increase and  key to decrease the volume.




Press the keys to adjust the volume.

In the idle mode, you can adjust the key tone volume using the same keys.

Quick Switching to Manner Mode


You can quickly switch your phone to manner mode with a touch of  key. Press and hold the key until the  icon and **-MannerMode-** appears in the display. Your phone goes to the vibration mode immediately.


Press and hold  key again to resume the phone's alert type which was previously set through the **Ring** menu under **SOUND** menu; see page 36 for further details.

This feature is convenient when you are in a hurry to mute the phone's ringer in a theater for example.


The phone doesn't make any sound, for example, key tone and SMS alerting tone.

Recording Voice Memo

You can access **VOICE MEMO** menu by pressing  key on the left side of the phone in the idle mode.

If you want to record voice memo, press and hold the  key. Your phone records voice up to 60 seconds while the key is pressed and held.



Press the  key when you record a memo.






For more information on **VOICE MEMO** menu, refer to page 44.

Using the Menus






A three-level menu structure is available to set the various options available on your phone. You can set the menu options in two different ways.

Using the Scroll Keys


The following keys are used to set menu option by scrolling then selecting an option.

Key	Purpose
	Enters the menu structure. <i>In the idle mode</i> , moves to the next menu in the main menu level and moves to the next screen in the sub-menu levels.
	<i>In the menu mode</i> , moves to the next menu or option. You can also use the  or  key on the left side of the phone to move to the next or previous option.
	Access the menu displayed or the highlighted option.




Example: Connecting the **Record** option in **VOICE DIAL** menu

1. Press  key to access the main menu.
2. Press  or  key repeatedly until **VOICE DIAL** is displayed, then press  key. The **VOICE DIAL** menus are displayed.
3. Press  key to select **Record** highlighted. You are connected to **Record** option.

Using the Index System

 
 
Each menu option is assigned a hierarchical number. You can use this number to access the corresponding option directly. Simply press  and key in the required number.

Example: Connecting the **Record** option in **VOICE DIAL** menu.

1. Press  key to access the main menu.
2. Press  key to access **VOICE DIAL** menu. The **VOICE DIAL** menus are displayed.
3. Press  key to select **Record**. You are automatically connected to **Record** option.

The numbers assigned to each option are indicated on the following menu map.

Menu Map

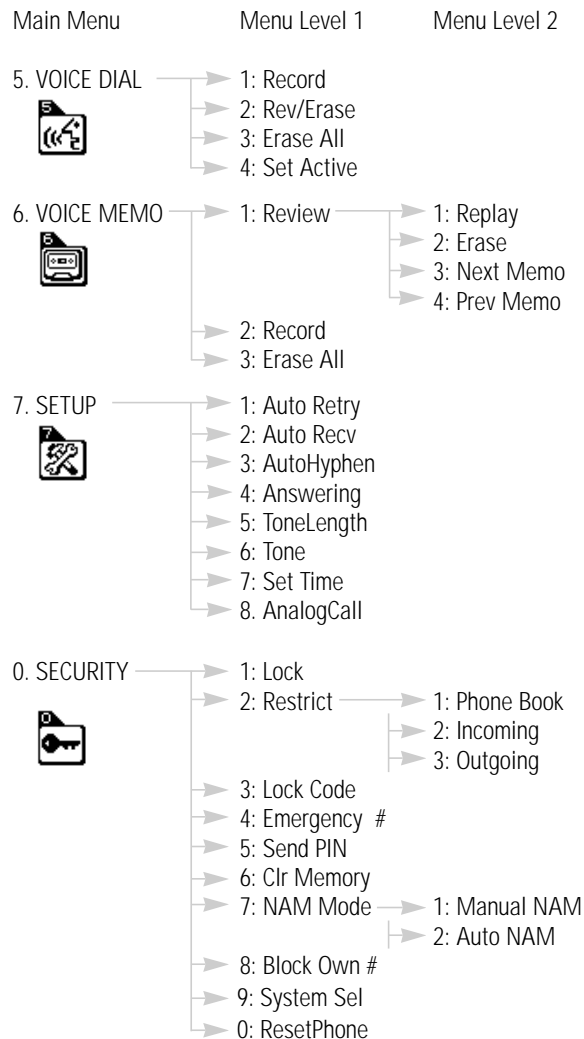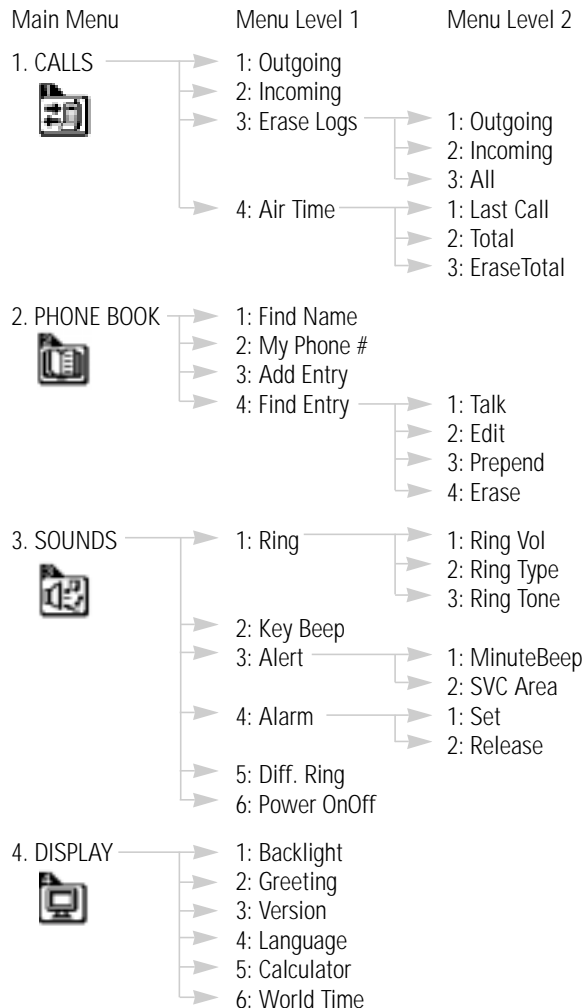

Calls

You can use the **Calls** menu to:

- View and dial the last outgoing or incoming numbers.
- Erase the numbers in the CallLog memory
- View the duration of calls.

Outgoing

Menu 1-1


The phone stores up to nine outgoing calls you dialed. When you access this menu, the list of outgoing calls are displayed.

To...

Select an entry

Dial the selected entry

View the date and time
at which the call was dialed
and use option features

When you press  key, you can view the date/time stamp for the selected entry. If there is a Phone Book match, the name displays.

Press  key to access **Options**. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows Phone Book entry or stores the number in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling or saving the number.

Press...

 key

 key

 key

Incoming

Menu 1-2


This option lets you view the last 9 calls received. When you access this menu, the last of incoming calls are displayed.

To...

Select entry

Dial the selected entry

View the date and time
at which the call was received
and use option features

When you press  key, you can view the date/time stamp for the selected entry. If there is a Phone Book match, the name displays.

Press  key to access **Options**. The following options are available:

Talk: dials the selected number.

Show Entry (or **Store** if the phone number is not currently stored in the Phone Book): shows Phone Book entry or stores the number in the Phone Book.

Prepend: allows to add an area code or feature code to the number before calling or saving the number.

Press...

 key

 key

 key

Erase Logs

Menu 1-3

You can erase the numbers stored in the Call Log memory.

Outgoing: The numbers you called are erased.

Incoming: The numbers you received are erased.

All: All calls you dialed and received are erased.

Air Time

Menu 1-4

Using this option, you can view the call time of the last call, as well as total air time for all calls since you last reset the timer.

Last Call: duration of the last call

Total : total duration of all calls made since the timer was last reset.


EraseTotal: resets the call timers.




The Phone book allows you to store frequently used phone numbers and the associated names in your personal directory to make it easy for you to make a call without having to remember or enter the phone number. You can store up to 79 numbers.

Find Name

Menu 2-1

This option displays the stored names in the Phone Book in alphabetical list.

Press  key to scroll to the desired name. You can also enter the first letter of the name by pressing the associated alphanumeric key. Using this method, the phone searches for the names in the list beginning with that letter, and then displays the first name in that section of the list. If desired, you can also enter the second letter in the name by pressing the associated alphanumeric key.



When the desired entry displays, press  key to place a call. If you press  key, then  key, you can access the following options:

Talk: dials the number.

Edit: allows you to edit phone number, name, or entry number. **Secret** option prevents the number from being displayed on the screen.


Prepend: prepends the number to add an area code or feature code to the number before dialing.

Erase: erases the number.

Note: You can locate Phone Book entries quickly when the phone is in the idle mode. Press  key to access **Find Name** menu in one step and then press  key to scan entries.

My Phone Number

Menu 2-2


You can check your phone number. If you have more than one phone number, press  key to check the next number.




Note: You can block this feature by setting **Block Own Number** option to **ON**. Refer to page 52.

Add Entry

Menu 2-3

Using this option, you can store a phone number with a name in your Phone Book.



Enter the phone number and press  key. The first available location displays.

To accept the displayed location, press  key. To select another location, press  key to scroll to the desired location or enter the location number using number keys, then press  key.

To include a name with the phone number entry, enter the desired name, then press  key. For information on how to enter a name, see page 35.

Storing Phone Numbers at Call End

To store a phone number following conversation:




1. Press  key to end the call. The call time and the phone number display.
2. To store the phone number, press  key. The first available location displays.
3. To finish this process, follow above mentioned instructions.

Entering a Name

1. Press the key labeled with required letter.

Since each key has three or more letters, press the key repeatedly until the desired letter appears in the display.



2. Select the other letters in the same way.

Note: The cursor moves to next available space when you press a different key. When entering the same letter twice (or a different letter on the same key), just wait for a second for the cursor to move automatically, and then select the next letter. You can also move the cursor by using  and  keys. To delete letters, press  key.



Find Entry

Menu 2-4

This option allows you to find an entry by location number.

Enter the location by pressing the number keys or press  key to scroll to the desired location, then press  key to display the selected entry.

When the desired entry displays, press  key to place a call.

If you press  key, then  key, you can access the following options. For details on Options, refer to **Find Name** menu on page 33.

Sounds



You can use the Sounds feature to customize various sound settings, such as the:


- Ring volume, type, and tone
- Alert sounds

Ring

Menu 3-1

Ring Volume

This option allows you to adjust the ringing volume to one of nine levels. You can also turn the ringer off. Use the  or  key on the left side of the phone. The greater the number of bars, the greater the volume. You will also hear a sample tone.

Note: During an incoming call, you can mute the ringer by pressing  key.

Ring Type

This option allows you to indicate how you are to be informed of any incoming calls. The following options are available.

BELL: The phone rings using the ring tone selected via the menu option.

LAMP: The backlight is switched on and the lamp blinks; the phone neither rings nor vibrates.

VIBRATOR: The phone vibrates but does not ring.



VIB + BELL: The phone vibrates first, then rings.

Ring Tone

This option allows you to select the required ringing tone. You can choose among 20 different tones or melodies. Each time you select a tone, it is played for a few seconds.

Key Beep

Menu 3-2

This option allows you to adjust the tone volume that the keypad generates when you press a key. You can also use  or  key on the left side of the phone to adjust key volume in the idle mode.

Alert

Menu 3-3

Minute Beep

With this menu option set to **ON**, the phone beeps every minute during an outgoing call to keep you informed of the duration of your call.

Service Area

With this menu option set to **ON**, the phone beeps when you exit service area or when you return to a service area.

Alarm

Menu 3-4


The option allows you to set the alarm to ring at a specific time.

The following options are available.

Daily: the alarm rings every day at the same time.

One Time: the alarm rings only once and is then deactivated.

To set the alarm, proceed as follows.

1. Select **Set**.
2. Choose the alarm frequency option.
3. Enter the required time.
4. Press  **key**.

To stop the alarm when it rings, simply open the flip cover or press any key. To deactivate the alarm, select **Release**.

Differential Ring

Menu 3-5

This option allows you to designate a unique ring to signal an incoming call by a stored caller number.

You can specify up to 5 callers and select a unique ring tone for each caller from 20 different tones and melodies.

Power On/Off

Menu 3-6

This menu enables or disables the phone to sound when it is switched on or off. The following options are available:

ENA. ENA.: the phone sounds both when it is switched on and off.

DIS. ENA.: the phone does not sound when it is switched on, and sounds when off.

ENA. DIS.: the phone sounds when it is switched on, and does not sound when off.

DIS. DIS.: the phone does not sound neither when it is switched on nor off.

Backlight

Menu 4-1

You can select whether or not the phone uses the LCD backlight. The following options are available.

8 SECONDS: The backlight comes on when you press a key or receive a call and switches off 8 seconds after the last key is pressed.

OFF: The backlight is not used.

Greeting

Menu 4-2

This option allows you to set a greeting message to be displayed in the idle mode. It is preset to **SAMSUNG**. You can change the greeting message according to your own preference.

Enter your personal greeting up to 12 digits by using the alphanumeric keys. For more information on entering a name, refer to page 35.

Version

Menu 4-3

This option allows you to view the software version of your phone.

Language

Menu 4-4



You can select a voice and text language on your phone.

Calculator




Menu 4-5

Using this menu, you can use the phone as a 9-digit calculator. The calculator operates basic mathematic functions; addition, subtraction, multiplication, division.

How To Use the Calculator


1. Enter the first input using the number keys.
2. Press the  or  key until you find the desired mathematical symbol; + (add), - (subtract), x (multiply), / (divdve).
3. Enter the second input.

Notes:

- Press **CLR** key to erase any mistakes. **CLR** key also clears the display.
 - To include a demical point, use the  key, and to include a minus sign, use  key.
4. To get the result, press the  key.
 5. Repeat these steps as many times as needed.

World Time

Menu 4-6

The menu allows you to check the current time in 35 major cities around the world, using the  key.

When you select a city, the screen takes turns to show the selected city name (or names) and the current date and time with a world map and a bar penetrating the selected city .

Voice Dial

You can call up to 20 stored entries by speaking the name into the microphone. Before using the Voice Dialing feature, you must record the name in your phone.

Record


Menu 5-1

This option allows you to register numbers for subsequent voice dialing. The phone provides voice prompts and screen displays to guide you through the recording process.

Respond to the prompt by saying the name you want to save. The phone stores the name as a first sample, and then prompts for the name again.

Respond to the prompt by repeating the name after the beep. The phone stores the name as a second sample, and then requests the phone number.

Enter the phone number by pressing the digit keys.

To store the phone number, press  key. The name (if matched up to Phone Book) and number display, along with the notification **Recorded**.

Tips on Recording Name


- Avoid recording similar names phonetically. If you record a similar name to the one already in memory, the phone requests another name.

- Speak clearly and naturally.
- The person who will use the phone should record the name. The phone does not recognize the name if the voice sounds differently.
- Avoid too long or too short name. It is recommended to contain 2 to 5 syllables.
- If this feature does not work properly, erase the name, and record with another name.
- It is recommended to practice several times to obtain best result.
- You can record up to 20 names. If you try to record more than 20, the phone announces 'Memory is full'.


Review/Erase

Menu 5-2

This option allows you to check or erase an individual voice dial entry. A list of entries displays.




Press the digit key to select the desired entry, or press the  key to scan entries.

When you select the desired entry, the recorded name plays audibly.

If you want to erase the selected entry, press  key while the name is playing.


Erase All

Menu 5-3


This option allows you to delete all voice dialing entries. Press  key, when you asked to confirm. Otherwise, press  or  key to exit the function without deleting the voice dialing entries.

Set Active

Menu 5-4

Voice Dialing is always active once you have recorded a name and have entered the associated phone number. To place a call using Voice Dialing, simply press and hold  key in the idle mode and then say the name into the phone after you hear the prompt.

You can also initiate a Voice Dialing call just by opening the flip, when you select this option.

[*] only: Enables Voice Dialing only by pressing and holding  key.

[*]/Flip: Enables Voice Dialing by pressing and holding  key or by opening the flip.

Voice Memo

You can use the Voice Memo feature to:

- Record up to 10 voice memos
- Play the recorded voice memos
- Erase one or all voice memos

Review

Menu 6-1

This option allows you to play back all memos recorded, starting with the most recent memo. The screen displays the label if you have entered. If not, the screen displays the date and time when the memo was recorded.

While the memos are playing, the following options are available.

Replay: plays the current memo once again.

Erase: erases the memo currently being played.


Next Memo: skips to the next memo.

Prev Memo: skips to the previous memo.

Record

Menu 6-2

This option allows you to record a memo. You can record up to 10 different memos.

Press and hold  key on the left side of the phone. You can record a memo for a maximum of 60 seconds.

To stop recording, press the key again. The following options display.


Add Label: allows you to add a label for the memo you have just recorded. Enter a proper name up to 12 digits using the number keypad. If you do not add a label, the recorded date and time will be used to identify the memo.

Continue: allows you to continue recording the memo.

Erase: allows you to erase the memo you have just recorded.

Erase All

Menu 6-3

This option allows you to erase all the memos. Press  key when you are asked to confirm.

Setup

Many different features of your phone can be customized to suit your preferences.

Auto Retry

Menu 7-1

With this menu option set to **ON**, when you place a call and the call does not connect, your phone continues to place the call to the entered phone number.

Auto Receive

Menu 7-2

With this menu option set to **ON**, the phone automatically answers calls.

When a call comes in, your phone will answer the call automatically after 2 rings. The feature does not work if the phone is in vibration mode or its ring volume is set to **Off**.

Auto Hyphen

Menu 7-3

With this menu option set to **ON**, your phone automatically hyphenates numbers as follows: 012-345-6789.

Digits following a pause are not hyphenated.


Answering

Menu 7-4

When a call comes in, you can answer the call by opening the flip cover or pressing any key.

The following options are available:

By Opening: the phone answers when you open the flip.

AnyKey Ans.: the phone answers when you press any key except for the  key.

Tone Length

Menu 7-5

Some phones you call can recognize only longer tones. You may have to change the length to **LONG** for some calls. When calling a paging system, your phone should be in the **SHORT** mode.

Tone

Menu 7-6

Release Tone: You can set your phone to sound the release tone when a call is released or dropped.

Connect Tone: You can set your phone to sound the connect tone when your call is connected to the system.

Set Time

Menu 7-7

The option enables you to set the current date and time. Enter the time and date.

The current time, if set, displays. The month, day, hour and minute must be entered with 2 digits. The year requires all four digits. If you do not input the time or you input the wrong time, **Invalid Time** displays.

Analog Call

Menu 7-8

Your phone is preset to Digital mode. If you want to place a call in Analog mode, use this menu. But if your system supplier does not provide AMPS service, this feature is unavailable.

If you end the Analog call, your phone returns to Digital mode automatically.

Security

Your phone provides many security options, including a user-programmable lock code and call restriction features.

To access the security menu, you must enter a four-digit lock code.

Lock

Menu 0-1

Locking the phone restricts outgoing calls to emergency numbers.




The following options are available:

OFF: the phone remains unlocked.

NOW: the phone locks immediately

ON POWER-UP: the phone locks automatically at the next power-up.

To place an emergency call on Lock mode:

- To call an emergency number, enter the number and then press  key.
- To place normal outgoing calls, press  key to display the Lock Code screen, and then enter the lock code. When the Standby screen displays, enter the phone number, and then press  key.

Restrict

Menu 0-2

This feature allows you to restrict your calls. Call Restriction can be set up in the following ways.

Phone Book: the phone restricts the use of the Phone Book.

Incoming: calls cannot be received.

Outgoing: calls cannot be made.

Each option can be restricted or unrestricted individually.

Lock Code

Menu 0-3

This feature allows you to change your current lock code to a new one. The lock code is preset to 0000 at factory.

Enter a new, four-digit lock code.

Emergency Number

Menu 0-4

This feature allows you to call to emergency numbers when the phone is locked or when the outgoing call is restricted.

This menu provides the option of storing three emergency numbers. Select a location and enter the desired number.

To dial emergency numbers in Lock mode; enter the emergency number, then press  key.

Send PIN

Menu 0-5

This feature prevents the phone from being used by unauthorized persons. The feature is only available when if your system supplier provides this service and you have a PIN assigned by the system supplier.

These options are available:

Never: The option is not activated.

Prompt: When you make a call, you are asked to send PIN.

For information about this service in detail, contact your service provider.

Clear Memory

Menu 0-6

This menu option allows you to erase all numbers in the Phone Book memory.

NAM Mode

Menu 0-7

The NAM (Number Assignment Module) enables you to subscribe to one or more service networks.

The following options are available:

Manual NAM: You set the phone to the network you want to use. You can select a NAM from a maximum of 2 NAMs. If you select a new network manually, the phone shows the greeting message and sounds the starting beep, and then returns to the Standby mode.
For details, contact your service provider.

Auto NAM: With this option is set to **ON**, the phone selects the networks automatically based on system information for the area you are in.

Block Own Number

Menu 0-8

This feature allows you to block your own number display, and others cannot view your phone number. If you turn this feature on, the message **Blocked for phone number** displays when the **My phone # (2-2)** feature is accessed.

System Selection

Menu 0-9

With this menu option, you can select the system service mode between FM(analog) and CDMA(digital). Each service mode allows you to select a roaming option. Roaming is a feature which is only relevant in areas where there are at least two cellular service providers and having valid roaming agreements.

Roaming, when available, allows you to register your phone on one of the networks, but use the facilities of the other if your own network is not available. This system priority feature allows you to program your phone for optimum operation when within your home service area or when outside your home service area.

Contact your home cellular service provider for information on the availability of this feature and roaming agreements they have with other cellular service providers.

There are five different roaming options:

A Only: the phone uses A system only.

A Pref: the phone tries A system first, then tries the other.

B Only: the phone uses B system only.

B Pref: the phone tries B system first, then tries the other.


Home Only: the phone uses your home network only.

Reset Phone

Menu 0-0

With this menu option, you can easily reset your phone to its default configuration. Also, all phone memories are cleared.

Messages

Your phone receives voicemail notification, text messages, and pages. And your phone transmits text messages and pages if your system supplier provides this service. When the phone receives a message, an alert sounds, and a text notification displays. The  icon remains on the screen until you read the pending text messages or until you listen to the voicemail notification messages.


Your phone can store up to 20 pages and text messages, depending on the length of the message. If the message memory is full, an error message is displayed and you cannot receive any new messages. Delete obsolete messages.

Reading Message




The menu allows you to read voicemail notification, text messages, and pages.



The following options are available:

Voice ( 1-1): The screen displays Voicemail, the time, date and the number of new, unread messages.


Press  key to access the following options.




- Listen: You can listen to the voicemail.
- Reset: You can reset the counter for voicemail messages, if desired. (The system resets the counter automatically after you listen to all new messages.)


Page ( 1-2): An indexed list of page messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.


Select the desired message to review, then press  key. After reviewing the message, press  key to access the following options.

- Talk: To call the phone number.
- Save: To store the phone number in your Phone Book.
- Next: To review the next message.
- Previous: To review the previous message.

Text ( 1-3): An indexed list of text messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.

Select the desired message to review, then press  key. After reviewing the message, press  key to access the following options. For details on Option, refer to the **Page** ( 1-2) menu.

Via the **Alert** ( 1-4) menu, the phone alerts you when a message is received. You can choose how frequently this happens. The three options are : **EVERY 2 MIN**, **OFF**, **ONCE**.

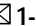To delete all stored messages you have received, select **Erase All** ( 1-5).

Transmitting Message



The menu allows you to transmit pages and text messages, and to store the messages you have transmitted.

The following options are available:

Paging (✉ 2-1): When prompted, enter destination address number, then a number you want to be called back.

Messaging (✉ 2-2): When prompted, write the message and enter its destination address number, then a number you want to be called back. You can set text message's priority. Priority options are available: **NORMAL**, **URGENT**, **EMERGENCY**.

The messages you have transmitted are stored in **TX Box (✉ 2-3)**.

- **Stored Msg:** This menu allows you to read the stored messages you have transmitted.
- **Erase All:** This menu allows you to erase all messages you have transmitted.

Batteries

Three types of Li-ion batteries are available for use with your phone:

- SLIM Battery
- STANDARD Battery
- EXTENDED Battery

Cigarette Lighter Adapter

The Cigarette Lighter Adapter charges your phone in a vehicle while you drive and enables you to operate the phone from a vehicle cigarette lighter socket.

Travel Charger

The Travel Charger plugs into a wall outlet and enables you to charge a single battery at your home or office or while traveling.

Hands-Free Car Kit

The Hands-Free Car Kit provides safety, freedom and convenience in your vehicle. (Kit includes Cradle and Microphone.)

Ear-Microphone

The Ear-Microphone includes both the earpiece and microphone in a convenient, lightweight unit.

Using the Batteries

Your phone is powered by a rechargeable Li-ion standard battery.

The following batteries are also available (ask your SAMSUNG dealer for further details):

- SLIM Battery
- STANDARD Battery
- EXTENDED Battery

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.

- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road Safety

- Remember, road safety always comes first!
- Do not use a hand-held phone while driving a vehicle. Always park the vehicle before having a conversation.
- Make sure that the phone is stored safely and will not fall or be broken in the event of a collision or emergency stop.
- The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.
- Only qualified personnel should install or service the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the unit.
- Electronic fuel injection, anti-skid braking, electronic cruise control or any other electronic systems may malfunction due to the lack of protection from radio signals. Check regularly that all cellular phone equipment in your vehicle is mounted and operating correctly.

Operating Environment

- Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).
- Operation of any radio transmitting equipment, including cellular phones, may interfere with inadequately protected medical devices. Consult a physician or the manufacturer of the medical device if you have any questions. Other electronic equipment may also be subject to interference.
- As with other mobile radio transmitting equipment, you are advised that for satisfactory operations and personal safety, the equipment should only be used in the normal operating position.
- Always switch off the phone when at a refuelling point (service station). You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- Switch off your cellular phone when in an aircraft. The use of cellular phones in an aircraft is illegal and may be dangerous to the operation of the aircraft or disrupt the cellular network. Failure to observe these instructions may lead to the suspension or denial of cellular telephone services to the offender, legal action or both.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill the warranty obligations and enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids containing minerals will corrode the electronic circuits.
- Do not use or store the phone in dusty, dirty areas as its components may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up (to its normal temperature), moisture can form inside the phone, which may damage the electronic circuits.
- Do not attempt to open the phone. Non-expert handling of the phone may damage it.
- Do not drop or knock the phone. Rough handling may damage the internal circuits.

- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in mild, soapy water.
- If the phone or any of its accessories are not working properly, take them to your nearest qualified service centre. The personnel there will assist you, and if necessary, arrange for the phone to be repaired.

Emergency Calls

Important! This phone, like any cellular phone, uses radio signals, cellular and landline networks, as well as user-programmed functions that cannot guarantee connection in all conditions. Therefore, you should never rely solely on any cellular phone for essential communications (medical emergencies for example).

Remember, to make or receive any calls, the phone must be switched on and in a service area with adequate cellular signal strength.

Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. Check with local cellular service providers.

Glossary of Terms

Airtime - Actual time spent talking on the wireless phone. Most carriers bill customers based on how many minutes of airtime they use each month.

Antenna - A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Base Station - The fixed radio transmitter/receiver that maintains communications with mobile radio telephones within a given area. (Typically seen as cell or cell site)

CDMA - (Code Division Multiple Access) A spread-spectrum approach to digital transmission. With CDMA, each conversion is digitized and then tagged with a code. The mobile phone deciphers only a particular code to pick the right conversation off the air. The transmitted signal is just above noise level across the available bandwidth.

Channel - Communications signals transmit along paths called channels.

Codec - Compression & Decompression.

Deactivation - The process of rendering a wireless phone inactive.

DTMF - (Dual-tone Modulated Frequency) You send DTMF signals when you enter numbers by pressing the digit keys.

EVRC - (Enhanced Variable Rate Codec) EVRC is a new global standard for compressing and decompressing voice signals. EVRC uses a lower bit rate (the number of bits sent per second) than existing CDMA vocoders, while providing significant improvements in voice quality. This technology enables your phone to provide superb voice quality while benefiting from the ability to process more cellular voice calls using less bandwidth than the voice codecs in CDMA networks today.

Frequency - A measure based on time, as one or more waves per second, in an electrical or light wave information signal. A signal's frequency is stated in cycles-per-second or Hertz (Hz).

Hands-Free - A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.

LCD - (Liquid Crystal Display) Commonly used to refer to the screen display on the wireless phone.

LED - (Light Emitting Diode) Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The LED lights on the phone to indicate an incoming call. The lights on the charger to indicate that battery charging is taking place.

Prepend - The addition of a prefix, such as an area code, to a phone number.

RF - Radio Frequency

Roaming - The ability to use a wireless phone to make and receive calls in places outside of the home service area.

Service Charge - The amount paid each month to receive wireless service.

Standby Time - The amount of time a fully charged wireless portable or transportable phone can be on and idle without being in use. (See Talk Time)

Talk Time - The length of time a person can talk on a portable or transportable wireless phone without recharging the battery.

Vocoder - Voice Coder. A device used to convert speech into digital signals.

Voicemail - A computerized answering service that answers a call, plays a greeting and records a message. Depending on the sophistication of the service, it can notify the subscriber, via a pager, of an incoming call or message. (Also called voice messaging)

Wireless - Radio-based Systems that allow transmission of telephone or data signals through the air without a physical connection, such as a metal wire (copper) or fiber optic cable.



BASIC OPERATION		INTERNAL PHONE BOOK	
Make a call	Phone number + SEND	Store numbers into memory	Phone number + OK + OK + (or assign another location + OK) + name + OK
Receive a call	SEND or Open the flip	Calling by one-touch	0-9 (Hold the last digit of the hot line memory 00-09)
Adjust speaker volume	(In conversation mode) " /	Calling by two-touch	10-99 (Briefly press the first digit, and hold the last digit.)
Scan the last calls and dial	SEND + + SEND	Scan memories	10-99 (Briefly press + Name + OK
Switch to Manner mode	Press and hold #	• location	+
Voice dial	Press and hold *	Erasing a specific memory	+ + OK + MEMU + 4 + OK
Record voice memo	Press and hold 6		

Main Menu (To access, press MENU)			
1 : Calls	1 : Outgoing 2 : Incoming 3 : Erase Logs 4 : Air Time	5 : Voice Dial 6 : Voice Memo	4 : Set Active 1 : Review 2 : Record 3 : Erase All
2 : Phone Book	1 : Find Name 2 : My Phone # 3 : Add Entry 4 : Find Entry	7 : Setup	1 : Auto Retry 2 : Auto Receive 3 : AutoHyphone 4 : Answering 5 : ToneLength 6 : Tone 7 : Set Time 8 : AnalogCall
3 : Sounds	1 : Ring 2 : Key Beep 3 : Alert 4 : Alarm 5 : Diff. Ring 6 : Power On/Off	0 : Security	1 : Lock 2 : Restrict 3 : Lock Code 4 : Emergency # 5 : Send PIN 6 : Cir Memory 7 : NAM Mode 8 : Block Own # 9 : System Sel 0 : ResetPhone
4 : Display	1 : Backlight 2 : Greeting 3 : Version 4 : Language 5 : Calculator 6 : World Time		
5 : Voice Dial	1 : Record 2 : Rev/Erase 3 : Erase All		

Licensed by QUALCOMM Incorporated under one or more of the following Patents.

U.S Patent No. 4,901,307 5,056,109 5,099,204
5,101,501 5,103,459 5,107,225
5,109,390